

It is highly recommended that this manual be read in its entirety before using this product. Do not use this kit beyond the expiration date.

For Research Purposes Only. Not for use in diagnostic or therapeutic procedures. Purchase does not include or carry the right to resell or transfer this product either as a stand-alone product or as a component of another product. Any use of this product other than the permitted use without the express written authorization of BioLegend is strictly prohibited.

Table of Contents F	Page
Chapter 1: KIT DESCRIPTION	3
Introduction	3
Principle of the Assay	3
Beads Usage	4
Storage Information	5
Materials Supplied	6
Materials to be Provided by the End-User	8
Precautions	9
Chapter 2: ASSAY PREPARATION	. 10
Sample Collection and Handling	10
Reagent Preparation	10
Standard Preparation	11
Sample Dilution	12
Chapter 3: ASSAY PROCEDURE	13
Performing the Assay Using a Filter Plate	13
Performing the Assay Using a V-bottom Plate	16
Chapter 4: FLOW CYTOMETER SETUP	19
Chapter 5: DATA ACQUISITION AND ANALYSIS	19
Data Acquisition	19
Data Analysis	20
Chapter 6: ASSAY CHARACTERIZATION	21
Typical Data	21
Assay Sensitivity	21
Cross-Reactivity	22
Accuracy	22
Linearity of Dilution	23

Intra-Assay Precision	24
Inter-Assay Precision	25
Biological Samples	26
TROUBLESHOOTING	28
PLATE MAP	31

Chapter 1: KIT DESCRIPTION

Introduction

Chemotactic cytokines or chemokines play pivotal roles in various processes such as immune surveillance, organ development, angiogenesis, and immune responses. Expression profiling of chemokines, especially those involved in inflammation and immune disorders, is important in achieving a deeper understanding of disease states.

The Mouse Proinflammatory Chemokine panel is a multiplex bead-based assay panel, using fluorescence–encoded beads suitable for use on various flow cytometers. This panel allows simultaneous quantification of 13 Mouse chemokines, including MCP-1 (CCL2), RANTES (CCL5), IP-10 (CXCL10), Eotaxin (CCL11), TARC (CCL17), MIP-1 α (CCL3), MIP-1 β (CCL4), MIG (CXCL9), MIP-3 α (CCL20), LIX (CXCL5), KC (CXCL1), BLC (CXCL13) and MDC (CCL22). This assay panel provides higher detection sensitivities and broader dynamic ranges than traditional ELISA methods. The panel has been validated for use on erum, plasma and cell culture supernatant samples.

The Mouse Proinflammatory Chemokine Panel is designed to allow flexible customization within the panel. Please visit **www.biolegend.com/legendplex** for more information on how to mix and match within the panel.

This assay is for research use only.

Principle of the Assay

BioLegend's LEGENDplex[™] assays are bead-based immunoassays using the same basic principle as sandwich immunoassays.

Beads are differentiated by size and internal fluorescence intensities. Each bead set is conjugated with a specific antibody on its surface and serves as the capture beads for that particular analyte. When a selected panel of capture beads is mixed and incubated with a sample containing target analytes specific to the capture antibodies, each analyte will bind to its specific capture beads. After washing, a biotinylated detection antibody cocktail is added, and each detection antibody in the cocktail will bind to its specific analyte bound on the capture beads, thus forming capture bead-analyte-detection antibody sandwiches. Streptavidin-phycoerythrin (SA-PE) is subsequently added, which will bind to the biotinylated detection antibodies, providing fluorescent signal intensities in proportion to the amount of bound analytes.

Since the beads are differentiated by size and internal fluorescence intensity on a flow cytometer, analyte-specific populations can be segregated and PE fluorescent signal quantified. The concentration of a particular analyte is determined using a standard curve generated in the same assay.

Beads Usage

The Mouse Proinflammatory Chemokine Panel uses two sets of beads. Each set has a unique size that can be identified based on their forward scatter (FSC) and side scatter (SSC) profiles (Beads A and Beads B, Figure 1). Each bead set can be further resolved based on their internal fluorescence intensities. The internal dye can be detected using FL3, FL4, or APC channel, depending on the type of flow cytometer used. The smaller Beads A consists of 6 bead populations and the larger Beads B consists of 7 bead populations (Figure 2-3).

Using a total of 13 bead populations distinguished by size and internal fluorescent dye, the Mouse Proinflammatory Chemokine Panel allows simultaneous detection of 13 chemokines in a single sample. Each analyte is associated with a particular bead set as indicated (Figures 2-3 and Table 1).

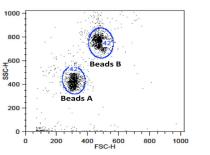


Figure 1. Beads Differentiated by Size

Beads A = smaller beads

Beads B = larger beads

Figure 2. Beads A Classification by FL4





Figure 3. Beads B Classification by FL4



Tel: 858-768-5800

For Beads usage in various panels, please refer to Table 1 below:

Target	Bead ID	Proinflammatory Chemokine Panel _{Cat. No.740007}	Top Standard Concentrations
RANTES	A4	V	
MIP-3α	A5	V	
Eotaxin	A6	V	Note: The top stan-
TARC	A7	v	dard concentrations of
КС	A8	V	analytes in this panel were set at various
MCP-1	A10	V	concentrations, but
MIG	B2	V	may be subject to change from lot to lot
IP-10	B3	V	(please visit biolegend.
MIP-1α	B4	V	com/en-us/legendplex to download a lot-
ΜΙΡ-1β	B5	V	specific certificate of
BLC	B6	V	analysis).
LIX	B7	V	
MDC	B9	V	

Table 1. Beads ID* and Panel-Specific Target Selection

*Bead ID is used to associate a bead population to a particular analyte when using the LEGENDplex[™] data analysis software program. For further information regarding the use of the program please visit biolegend.com/en-us/legendplex.

Storage Information

Recommended storage for all original kit components is between 2°C and 8°C. DO NOT FREEZE Beads, Detection Antibodies or SA-PE.

- Once the standards have been reconstituted, immediately transfer contents into polypropylene vials. DO NOT STORE RECONSTITUTED STANDARDS IN GLASS VIALS.
- Upon reconstitution, leftover standard and Matrix B should be stored at ≤-70°C for use within one month. Avoid multiple (>2) freeze-thaw cycles. Discard any leftover diluted standards.

Materials Supplied

The LEGENDplex[™] kit contains reagents for 100 tests, listed in the table below. When assayed in duplicate, this is enough for an 8-point standard curve and 40 samples.

For the Mix and Match Subpanels, individual beads are provided at 13X concentration. The Buffer Set contains Setup Beads, all Buffers, Plate Sealers, Matrix, and SA-PE.

Kit Components	Quantity	Volume	Cat #
Capture Beads* (see tables below for more information)	varies	varies	varies
LEGENDplex [™] Mouse Proinflammatory Chemokine Detection Antibodies	1 bottle	3.5 mL	740074
LEGENDplex [™] Mouse Proinflammatory Chemokine Standard	1 vial	lyophi- lized	740370
LEGENDplex™ Buffer Set A	1		740368
Filter Plate* or V-bottom Plate**	1 Plate		740377*or 740379**

* For assay with filter plate. ** For assay with V-bottom plate.

Capture beads for Mix and Match Subpanels*:

Bead Name	Quantity	Volume	Cat#
LEGENDplex™ Mouse CCL5 (RANTES) Capture Bead A4, 13X	1 vial	270 μL	740092
LEGENDplex™ Mouse CCL20 (MIP-3α) Capture Bead A5, 13X	1 vial	270 μL	740095
LEGENDplex™ Mouse CCL11 (Eotaxin) Capture Bead A6, 13X	1 vial	270 μL	740093
LEGENDplex [™] Mouse CCL17 (TARC) Capture Bead A7, 13X	1 vial	270 μL	740094
LEGENDplex™ Mouse CXCL1 (KC) Capture Bead A8, 13X	1 vial	270 μL	740096
LEGENDplex™ Mouse CCL2 (MCP-1) Capture Bead A10, 13X	1 vial	270 μL	740089
LEGENDplex™ Mouse CXCL9 (MIG) Capture Bead B2, 13X	1 vial	270 μL	740099

LEGENDplex [™] Mouse CXCL10 (IP-10) Capture Bead B3, 13X	1 vial	270 μL	740100
LEGENDplex™ Mouse CCL3 (MIP-1α) Capture Bead B4, 13X	1 vial	270 μL	740090
LEGENDplex [™] Mouse CCL4 (MIP-1β) Capture Bead B5, 13X	1 vial	270 μL	740091
LEGENDplex [™] Mouse CXCL13 (BLC) Capture Bead B6, 13X	1 vial	270 μL	740101
LEGENDplex™ Mouse CXCL5 (LIX) Capture Bead B7, 13X	1 vial	270 μL	740097
LEGENDplex [™] Mouse CCL22 (MDC) Capture Bead B9, 13X	1 vial	270 μL	740098

* Please refer to Beads ID and Panel-Specific Target Selection table (Table 1), to see which capture beads are included in each panel.

LEGENDplex[™] Buffer Set A (Cat#: 740368)

Components	Quantity	Volume	Part #
Setup Beads 1: FITC Beads	1 vial	1 mL	77840
Setup Beads 2: PE Beads	1 vial	1 mL	77842
Setup Beads 3: Raw Beads	1 vial	2 mL	77844
LEGENDplex [™] SA-PE	1 bottle	3.5 mL	77743
LEGENDplex [™] Matrix B, Lyophilized	1 vial	lyophilized	77549
LEGENDplex [™] Assay Buffer	1 bottle	25 mL	77562
LEGENDplex [™] Wash Buffer, 20X	1 bottle	25 mL	77564
Plate Sealers	4 sheets		78101

No plate is included in Buffer Set A. Plate need to be ordered separately. Please order the correct type of plate based on the preferred assay protocol (Cat# 740377 or 740378 for Filter Plate and Cat# 740379 for V-bottom Plate)

Materials to be Provided by the End-User

• A flow cytometer equipped with two lasers (e.g., a 488 nm blue laser or 532 nm green laser and a 633-635 nm red laser) capable of distinguishing 575 nm and 660 nm or a flow cytometer equipped with one laser (e.g., 488 nm blue laser) capable of distinguishing 575 nm and 670 nm.

Flow Cytometer	Reporter Channel	Channel Emission	Classification Channel	Channel Emission	Compen- sation needed?
BD FACSCalibur [™] (single laser)	FL2	575 nm	FL3	670 nm	Yes
BD FACSCalibur [™] (dual laser)	FL2	575 nm	FL4	660 nm	No*
BD Accuri™C6	FL2	585 nm	FL4	675 nm	No*
BD FACSCanto [™] BD FACSCanto [™] II	PE	575 nm	APC	660 nm	No*
BD [™] LSR, LSR II BD LSRFortessa [™]	PE	575-585 nm	АРС	660 nm	No*
BD FACSAria [™]	PE	575 nm	APC	660 nm	No*
Beckman Coulter- CytoFLEX	PE	585 nm	АРС	660 nm	No*
Gallios	PE	575 nm	APC	660 nm	No*
NovoCyte	PE	572 nm	APC	660 nm	No*

Partial list of compatible flow cytometers:

*Compensation is not required for the specified flow cytometers when set up properly.

For setting up various flow cytometers, please visit: **www.biolegend.com/ legendplex** and click on the **Instrument Setup** tab.

- Multichannel pipettes capable of dispensing 5 μ L to 200 μ L
- Reagent reservoirs for multichannel pipette
- Polypropylene microfuge tubes (1.5 mL)
- Laboratory vortex mixer
- Sonicator bath (e.g., Branson Ultrasonic Cleaner model #B200, or equivalent)
- Aluminum foil
- Absorbent pads or paper towels
- Plate shaker (e.g., Lab-Line Instruments model #4625, or equivalent)

8

- Tabletop centrifuges (e.g., Eppendorf centrifuge 5415 C, or equivalent)
- 1.1 mL polypropylene micro FACS tubes, in 96-tube rack (e.g., National Scientific Supply Co, catalog # TN0946-01R, or equivalent).

If the assay is performed in a filter plate;

- A vacuum filtration unit (Millipore MultiScreen [®] HTS Vacuum Manifold, cat # MSVMHTS00 or equivalent). Instructions on how to use the vacuum manifold can be found at the supplier's website.
- A vacuum source (mini vacuum pump or line vacuum, e.g., Millipore Vacuum Pump, catalog # WP6111560, or equivalent).
- If needed, additional Filter plate can be ordered from BioLegend (Cat# 740377 or 740378).

If the assay is performed in a V-bottom plate;

- Centrifuge with a swinging bucket adaptor for microtiter plates (e.g., Beckman Coulter Allegra[™] 6R Centrifuge with MICROPLUS CARRIER adaptor for GH3.8 and JS4.3 Rotors).
- If needed, additional V-bottom plate can be ordered from BioLegend (Cat# 740379).

Precautions

- All blood components and biological materials should be handled as potentially hazardous. Follow universal precautions as established by the Center for Disease Control and Prevention and by the Occupational Safety and Health Administration when handling and disposing of infectious agents.
- Sodium azide has been added to some reagents as a preservative. Although the concentrations are low, sodium azide may react with lead and copper plumbing to form highly explosive metal azides. On disposal, flush with a large volume of water to prevent azide build-up.
- Matrix B for LEGENDplex[™] kits contains components of human origin and should be handled as potentially hazardous. The raw material has been screened for infectious diseases and is negative for HIV, HBV and HCV using FDA-approved test methods.
- Do not mix or substitute reagents from different kits or lots. Reagents from different manufacturers should not be used with this kit.
- Do not use this kit beyond its expiration date.
- SA-PE and Beads are light-sensitive. Minimize light exposure.

Chapter 2: ASSAY PREPARATION

Sample Collection and Handling

Preparation of Serum Samples:

- Allow the blood to clot for at least 30 minutes and centrifuge for 10 minutes at 1,000 x g.
- Remove serum and assay immediately or aliquot and store samples at <-20°C. Avoid multiple (>2) freeze/thaw cycles.
- When using frozen samples, it is recommended that samples are thawed completely, mixed and centrifuged to remove particulates prior to use.

Preparation of Plasma Samples:

- Plasma collection using EDTA as an anti-coagulant is recommended. Centrifuge for 10 minutes at 1,000 x g within 30 minutes of blood collection.
- Remove plasma and assay immediately, or aliquot and store samples at <-20°C. Avoid multiple (>2) freeze/thaw cycles.
- When using frozen samples, it is recommended that samples are thawed completely, mixed well and centrifuged to remove particulates.

Preparation of Tissue Culture Supernatant:

• Centrifuge the sample to remove debris and assay immediately. If not possible, aliquot and store samples at ≤-20°C. Avoid multiple (>2) freeze/thaw cycles.

Reagents Preparation

Preparation of Antibody-Immobilized Beads

The individual beads (13X) should be mixed and diluted to 1X with Assay Buffer prior to use. To mix the beads, follow the steps below (a 5-plex subpanel is used as an example):

1. Sonicate the beads vials for 1 minute in a sonicator bath and then vortex for 30 seconds prior to use.

2. Calculate the amount of mixed and diluted beads needed for the assay. Prepare extra to compensate for pipetting loss. Each reaction needs 25 μ L of mixed and diluted beads. For 50 reactions, prepare 1.5 mL of mixed beads. For 96 reactions, prepare 3 mL of mixed beads.

3. To make 1.5 ml of 5-plex 1X diluted beads, transfer 115 μL of each of

the 5 individual beads (13X) to a fresh tube (total bead volume = 575 μ L) and add 925 μ L of Assay Buffer to make the final volume of 1.5 mL.

Preparation of Wash Buffer

- Bring the 20X Wash Buffer to room temperature and mix to bring all salts into solution.
- Dilute 25 mL of 20X Wash Buffer with 475 mL deionized water. Store unused portions between 2°C and 8°C for up to one month.

Preparation of Matrix B (for Serum or Plasma Samples Only)

 Add 5.0 mL LEGENDplex[™] Assay Buffer to the bottle containing lyophilized Matrix B. Allow at least 15 minutes for complete reconstitution. Vortex to mix well. Leftover reconstituted Matrix B should be stored at ≤-70°C for up to one month.

Standard Preparation

- 1. Prior to use, reconstitute the lyophilized Mouse Proinflammatory Chemokine Standard Cocktail with 250 μL Assay Buffer.
- 2. Mix and allow the vial to sit at room temperature for 10 minutes, and then transfer the standard to an appropriately labeled polypropylene microfuge tube. This will be used as the top standard C7.

Note: The top standard concentrations of analytes in this panel were set at various concentrations, but may be subject to change from lot to lot (please visit biolegend.com/en-us/legendplex to download a lot-specific certificate of analysis).

- 3. Label 6 polypropylene microfuge tubes as C6, C5, C4, C3, C2 and C1, respectively.
- 4. Add 75 μ L of Assay Buffer to each of the six tubes. Prepare 1:4 dilution of the top standard by transferring 25 μ L of the top standard C7 to the C6 tube and mix well. This will be the C6 standard.
- In the same manner, perform serial 1:4 dilutions to obtain C5, C4, C3, C2 and C1 standards (see the table below using 10ng/mL of top standard as an example). Assay Buffer will be used as the 0 pg/mL standard (C0).

Tube/Standard ID	Serial Dilution	Assay Buffer to add (μL)	Standard to add	Final Conc. (pg/mL)
C7				10,000
C6	1:4	75	25 µL of C7	2,500
C5	1:16	75	25 µL of C6	625
C4	1:64	75	25 µL of C5	156.3
C3	1:256	75	25 µL of C4	39.1
C2	1:1024	75	25 µL of C3	9.8
C1	1:4096	75	25 µL of C2	2.4
C0		75		0

Sample Dilution

• Serum or plasma samples must be diluted 2-fold with Assay Buffer before being tested (e.g. dilute 50 µL of sample with 50 µL of Assay Buffer).

If further sample dilution is desired, dilution should be done with Matrix B to ensure accurate measurement.

Adding serum or plasma samples without dilution will result in low assay accuracy and possibly, clogging of the filter plate.

• For cell culture supernatant samples, the levels of analyte can vary greatly from sample to sample. While the samples can be tested without dilutions, a preliminary experiment may be required to determine the appropriate dilution factor.

If sample dilution is desired, dilution should be done with corresponding fresh cell culture medium or Assay Buffer to ensure accurate measurement.

Chapter 3: ASSAY PROCEDURE

The LEGENDplex[™] assay can be performed in a filter plate, or in a V-bottom plate.

- The in-filter plate assay procedure requires a vacuum filtration unit for washing (see Materials to be Provided by the End-User, page 8).
- If the in-filter plate assay procedure is not possible or if you prefer, the assay can be performed in a V-bottom plate.

Performing the Assay Using a Filter Plate

- Allow all reagents to warm to room temperature (20-25°C) before use.
- Set the filter plate on an inverted plate cover at all times during assay setup and incubation steps, so that the bottom of the plate does not touch any surface. Touching a surface may cause leakage.
- Keep the plate upright during the entire assay procedure, including the washing steps, to avoid losing beads.
- The plate should be placed in the dark or wrapped with aluminum foil for all incubation steps.
- Standards and samples should be run in duplicate and arranged on the plate in a vertical configuration convenient for data acquisition and analysis (as shown in attached PLATE MAP, page 31). Be sure to load standards in the first two columns. If an automation device is used for reading, the orientation and reading sequence should be carefully planned.
- Pre-wet the plate by adding 100 µL of LEGENDplex[™] 1X Wash Buffer to each well and let it sit for 1 minute at room temperature. To remove the excess volume, place the plate on the vacuum manifold and apply vacuum. Do not exceed 10" Hg of vacuum. Vacuum until wells are drained (5-10 seconds). Blot excess Wash Buffer from the bottom of the plate by pressing the plate on a stack of clean paper towels. Place the plate on top of the inverted plate cover.

For measuring cell culture supernatant samples, load the plate as shown in the table below (in the order from left to right):

	Assay Buffer	Matrix B	Standard	Sample*
Standard Wells	25 μL		25 μL	
Sample wells	25 μL			25 μL

For measuring serum/plasma samples, load the plate as shown in the table below (in the order from left to right):

	Assay Buffer	Matrix B	Standard	Sample*
Standard Wells		25 μL	25 μL	
Sample wells	25 μL			25 μL


*See Sample Dilution

- 2. Vortex mixed beads bottle for 30 seconds. Add 25 μ L of mixed beads to each well. The volume should be 75 μ L in each well after beads addition. (Note: During addition of the beads, shake mixed beads bottle intermittently to avoid bead settling).
- 3. Seal the plate with a plate sealer. **To avoid plate leaking, do not apply positive pressure to the sealer when sealing the plate**. Wrap the entire plate, including the inverted plate cover, with aluminum foil. Place the plate on a plate shaker, secure it with a rubber band and shake at approximate 500 rpm for 2 hours at room temperature.
- 4. Do not invert the plate! Place the plate on the vacuum manifold and apply vacuum as before in Step 1. Add 200 μL of 1X Wash Buffer to each well. Remove Wash Buffer by vacuum filtration. Blot excess Wash Buffer from the bottom of the plate with an absorbent pad or paper towels. Repeat this washing step once more.
- 5. Add 25 µL of Detection Antibodies to each well.
- 6. Seal the plate with a fresh plate sealer. Wrap the entire plate, including the inverted plate cover, with aluminum foil. Place the plate on a plate shaker and shake at approximately 500 rpm for 1 hour at room temperature.
- **7.** Do not vacuum! Add 25 μL of SA-PE to each well directly.
- 8. Seal the plate with a fresh plate sealer. Wrap the entire plate, including the inverted plate cover, with aluminum foil. Place the plate on a plate shaker and shake at approximate 500 rpm for 30 minutes at room temperature.
- 9. Repeat step 4 above.
- 10. Add 150 μL of 1X Wash Buffer to each well. Resuspend the beads on a plate shaker for 1 minute.
- 11. Read samples on a flow cytometer, preferably within the same day of the assay (Note: Prolonged sample storage can lead to reduced signal).

If the flow cytometer is equipped with an autosampler, read the plate directly using the autosampler. **Please be sure to program the autosampler**

Mouse Proinflammatory Chemokine Mix and Match Subpanel to resuspend beads in the well immediately before taking samples. The probe height may need to be adjusted when using an autosampler.

If an autosampler is not available, the samples can be transferred from the filter plate to micro FACS (or FACS) tubes and read manually.

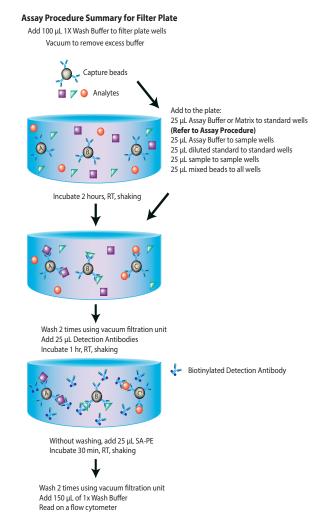

Performing the Assay Using a V-bottom Plate

- Allow all reagents to warm to room temperature (20-25°C) before use.
- Keep the plate upright during the entire assay procedure, including the washing steps, to avoid losing beads.
- The plate should be placed in the dark or wrapped with aluminum foil for all incubation steps.
- Standards and samples should be run in duplicate and arranged on the plate in a vertical configuration convenient for data acquisition and analysis (as shown in attached PLATE MAP, page 31). Be sure to load standards in the first two columns. If an automation device is used for reading, the orientation and reading sequence should be carefully planned.
- 1. For measuring cell culture supernatant samples, load the plate as shown in the table below (in the order from left to right):

	Assay Buffer	Matrix B	Standard	Sample*
Standard Wells	25 μL		25 μL	
Sample wells	25 μL			25 μL

For measuring serum/plasma samples, load the plate as shown in the table below (in the order from left to right):

	Assay Buffer	Matrix B	Standard	Sample*
Standard Wells		25 μL	25 μL	
Sample wells	25 μL			25 μL

*See Sample Dilution

- Vortex mixed beads for 30 seconds. Add 25 μL of mixed beads to each well. The total volume should be 75 μL in each well after beads addition. (Note: During beads addition, shake mixed beads bottle intermittently to avoid bead settling).
- 3. Seal the plate with a plate sealer. Cover the entire plate with aluminum foil to protect the plate from light. Shake at 800 rpm on a plate shaker for 2 hours at room temperature (Depending on the shaker, the speed may need to be adjusted. The optimal speed is one that is high enough to keep beads in suspension during incubation, but not too high so it causes spill from the wells).
- Centrifuge the plate at 1050 rpm (~250 g) for 5 minutes, using a swinging bucket rotor (G.H 3.8) with microplate adaptor (Please refer to Materials to be Provided by the End-User, page 8). Do not use excessive centrifugation speed as it may make it harder to resuspend beads in later steps. Make

16

sure the timer of the centrifuge works properly and standby to make sure the centrifuge reaches preset speed.


5. Immediately after centrifugation, dump the supernatant into a sink by quickly inverting and flicking the plate in one continuous and forceful motion. Do not worry about losing beads even if the pellet is not visible. The beads will stay in the tip of the well nicely. Blot the plate on a stack of clean paper towel and drain the remaining liquid from the well as much as possible. Be careful not to disturb the bead pellet.

Alternatively, removal of the supernatant may be completed using a multichannel pipette set at 75 μ L. Try to remove as much liquid as possible without removing any beads. Be sure to change pipette tips between each row or column.

- 6. Wash the plate by dispensing 200 μ L of 1X Wash Buffer into each well and incubate for one minute. Repeat step 4 and 5 above. A second wash is optional , but may help reduce background.
- 7. Add 25 µL of Detection Antibodies to each well.
- 8. Seal the plate with a new plate sealer. Cover the entire plate with aluminum foil to protect the plate from light. Shake at 800 rpm on a plate shaker for 1 hour at room temperature.
- 9. Do not wash the plate! Add 25 µL of SA-PE to each well directly.
- 10. Seal the plate with a new plate sealer. Wrap the entire plate with aluminum foil and shake the plate on a plate shaker at approximate 800 rpm for 30 minutes at room temperature.
- 11. Repeat step 4, and 5.
- 12. Wash the plate by dispensing 200 μ L of 1X Wash Buffer into each well and incubate for one minute. Repeat step 4 and 5 above. This washing step is optional but helps to reduce the background.
- 13. Add 150 μL of 1X Wash Buffer to each well. Resuspend the beads by pipetting.
- 14. Read samples on a flow cytometer, preferably within the same day of the assay (Note: Prolonged sample storage can lead to reduced signal).

If the flow cytometer is equipped with an autosampler, the samples can be read directly. Please be sure to program the autosampler to resuspend beads in the well immediately before taking samples. The probe height may need to be adjusted when using an autosampler.

If an autosampler is not available, the samples can be transferred from the plate to micro FACS (or FACS) tubes and read manually.

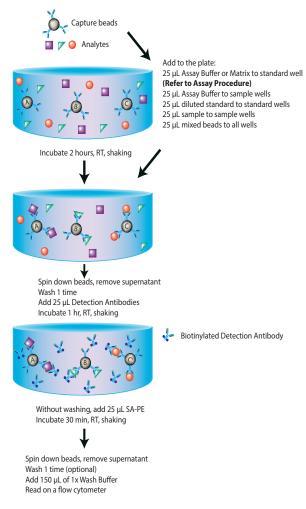

Assay Procedure Summary for V-bottom Plate

Chapter 4: FLOW CYTOMETER SETUP

In order to generate reliable data, the flow cytometer must be set up properly before data acquisition.

The setup instructions have been removed from this manual and uploaded onto our website to save paper.

To access the setup instructions, please visit: **www.biolegend.com/legendplex** and click on the **Instrument Setup** tab.

Chapter 5: DATA ACQUISITION AND ANALYSIS

Data Acquisition

- 1. Before reading samples, make sure that the flow cytometer is set up properly.
- 2. Create a new template or open an existing template (for details on how to create a cytometer-specific template, please refer to the Flow Cytometer Setup Guide).
- 3. Vortex each sample for 5 seconds before analysis.
- 4. Set the flow rate to low. Set the number of beads to be acquired to about 300 per analyte (e.g., acquire 2,400 beads for a 8-plex assay or 4000 beads for a 13-plex assay). Do not set to acquire total events as samples may contain large amounts of debris. Instead, create a large gate to include both Beads A and Beads B (gate A+B) and set to acquire the number of events in gate A + B. This will exlude majority of the debris.

Note: Do not acquire too few or too many beads. Too few beads acquired may result in high CVs and too many beads acquired may result in slow data analysis later.

5. Read samples.

When reading samples, set the flow cytometer to setup mode first and wait until bead population is stabilized before recording or switching to acquisition mode.

To simplify data analysis using the LEGENDplex[™] Data Analysis Software, read samples in the same order as shown on the PLATE MAP attached at the end of the manual. For an in-plate assay, read column by column (A1, B1, C1...A2, B2, C2...).

When naming data files, try to use simple names with a consecutive numbering for easy data analysis (e.g. for standards, C0.001, C0.002, C1.003, C1.004, C2.005, C2.006, C3.007, C3.008, ... C7.015, C7.016; for samples, S1.017, S1.018, S2.019, S2.020, S3.021, S3.022...)

Store all FCS files in the same folder for each assay. If running multiple assays, create a separate folder for each assay.

6. Proceed to data analysis using LEGENDplex[™] Data Analysis Software when data acquisition is completed.


Data Analysis

• The assay FCS files should be analyzed using BioLegend's LEGENDplex[™] data analysis software. The program is offered free of charge with the purchase of any LEGENDplex[™] assay. For further information regarding acccess to, and use of the program please visit **biolegend.com/en-us/legendplex**.

Chapter 6: ASSAY CHARACTERIZATION

Representative Standard Curve

This standard curve was generated using the LEGENDplex[™] Mouse Proinflammatory Chemokine Panel for demonstration purpose only. A standard curve must be run with each assay.

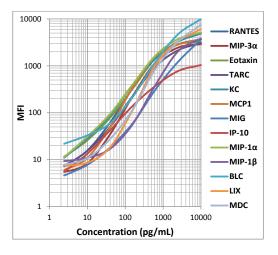

Assay Sensitivity

The assay sensitivity or minimum detectable concentration (MDC) is the theoretical limit of detection calculated using the LEGENDplex[™] Data Analysis Software by applying a 5-parameter curve fitting algorithm.

Analyte	MDC in Cell Culture Medium (pg/mL)	MDC in Serum (pg/mL)
Mouse RANTES	1.3	0.7
Mosue MIP-3α	2.3	2.2
Mosue Eotaxin	1.0	1.1
Mouse TARC	0.9	0.7
Mouse KC	0.9	0.9
Mouse MCP1	1.2	1.5
Mouse MIG	1.3	1.2
Mouse IP-10	1.1	1.3
Mouse MIP-1α	1.0	1.1

Mouse MIP-1β	1.5	1.1
Mouse BLC	2.4	1.5
Mosue LIX	1.7	1.0
Mouse MDC	0.9	0.9

Cross-Reactivity

The following mouse recombinant proteins were tested at 50 ng/mL using the LEGENDplexTM Mosue Proinflammatory Chemokine Panel. MIG showed 3.2% corss-reactivity with IP-10 and 0.5% cross-reactivity with LIX. MIP-1 α showed 0.8% cross-reactivity with MIP-1 β . MCP-1 showed 0.6% cross-reactivity with MIP-1 β . No or negligible cross-reactivity was found for all other analytes.

RANTES	6CKine	BLC	Eotaxin	Eotaxin-2	Fractalkine	I-309
IFN-γ	IL-2	IL-4	IL-5	IL-6	IL-9	IL-10
IL-13	IL-17A	IL-17F	IL-21	IL-22	IL-31	IP-10
ITAC	KC	LIX	MCP1	MCP-2	MCP-5	MDC
MEC	MIG	MIP-1α	MIP-1β	MIP-1γ	MIP-2	MIP-3α
ΜΙΡ-3β	SDF-1α	TARC	TECK	TNF-α		

Accuracy (Spike Recovery)

For spike recovery in cell culture medium, target proteins with known concentrations were spiked into cell culture medium (RPMI and DMEM with 10% FCS) at three different levels within the assay range. The spiked samples were then assayed, and the measured concentrations were compared with the expected values.

For spike recovery in serum, a sample with known high concentrations of target proteins was spiked into unknown serum samples. The spiked samples were then assayed, and the measured concentrations were compared with the expected values.

Analyte	% of Recovery in Cell Culture Medium	% of Recovery in Serum
Mouse RANTES	98%	84%
Mosue MIP-3α	104%	87%

Mosue Eotaxin	72%	102%
Mouse TARC	111%	77%
Mouse KC	114%	80%
Mouse MCP1	80%	88%
Mouse MIG	56%	131%
Mouse IP-10	72%	98%
Mouse MIP-1α	70%	92%
Mouse MIP-1β	65%	92%
Mouse BLC	67%	120%
Mosue LIX	135%	124%
Mouse MDC	60%	97%

Linearity of Dilution

For testing linearity of dilution, serum samples were first diluted two-fold with Assay Buffer, then serially diluted 1:2, 1:4, 1:8 with Matrix B and assayed. The measured concentrations of serially diluted samples were then compared with that of the two-fold diluted samples.

Analyte	Linearity of Dilution	Analyte	Linearity of Dilution
Mouse RANTES	101%	Mouse IP-10	105%
Mosue MIP-3 α	88%	Mouse MIP-1α	99%
Mosue Eotaxin	95%	Mouse MIP-1β	92%
Mouse TARC	118%	Mouse BLC	103%
Mouse KC	112%	Mosue LIX	118%
Mouse MCP1	110%	Mouse MDC	105%
Mouse MIG	83%		

Intra-Assay Precision

Two samples with different concentrations of target proteins were analyzed in one assay with 16 replicates for each sample. The intra-assay precision was calculated as below.

Analyte	Sample	Mean (pg/mL)	STDEV	%CV
Mouse RANTES	Sample 1	37.7	1.7	4%
MOUSE RAINTES	Sample 2	598.5	27	5%
	Sample 1	42	2.2	5%
Mouse MIP-3α	Sample 2	619.9	55.3	9%
	Sample 1	38.5	1.6	4%
Mouse Eotaxin	Sample 2	676	41.9	6%
	Sample 1	38.9	2.2	6%
Mouse TARC	Sample 2	649.9	53	8%
Maura	Sample 1	37.7	3	8%
Mouse KC	Sample 2	612	35.6	6%
	Sample 1	38.7	1.7	4%
Mouse MCP1	Sample 2	646.8	51.8	8%
Mouse MIG	Sample 1	38.8	4.6	12%
Mouse Mild	Sample 2	586.5	46.1	8%
Maura ID 10	Sample 1	37.8	3.8	10%
Mouse IP-10	Sample 2	569.1	50.9	9%
	Sample 1	38.5	1.9	5%
Mouse MIP-1α	Sample 2	628.3	31.4	5%
	Sample 1	38.6	4.5	12%
Mouse MIP-1β	Sample 2	603.1	34.9	6%
Maura DI C	Sample 1	35.5	4	11%
Mouse BLC	Sample 2	565.4	30.8	5%
Maura	Sample 1	37.3	2.1	6%
Mouse LIX	Sample 2	621	42.9	7%
	Sample 1	40.1	2.8	7%
Mouse MDC	Sample 2	605.6	30.7	5%

Inter-Assay Precision

Two samples with different concentrations of target proteins were analyzed in three independent assays with 3 replicates for each sample. The inter-assay precision was calculated as below.

Analyte	Sample	Mean (pg/mL)	STDEV	%CV
	Sample 1	39.5	2.8	7%
Mouse RANTES	Sample 2	606.7	34.6	6%
	Sample 1	42.3	2	5%
Mouse MIP-3α	Sample 2	611.2	43	7%
Mouse Eotaxin	Sample 1	40.4	3.2	8%
Mouse Eolaxin	Sample 2	644.1	43.5	7%
	Sample 1	41.2	2.8	7%
Mouse TARC	Sample 2	632.6	49.1	8%
Maura KC	Sample 1	41.7	3.1	7%
Mouse KC	Sample 2	621.5	37.5	6%
Mouse MCP1	Sample 1	41.5	2.3	5%
Mouse MCP1	Sample 2	659.9	41.3	6%
Mouse MIG	Sample 1	40.9	4.8	12%
Mouse Mig	Sample 2	579.4	51.5	9%
Mouse IP-10	Sample 1	39.4	3.3	8%
Mouse IP-10	Sample 2	561	47.2	8%
Mouse MIP-1α	Sample 1	40.1	2.7	7%
Mouse MIP-1a	Sample 2	624	37.7	6%
	Sample 1	40.5	5	12%
Mouse MIP-1β	Sample 2	583	23.2	4%
	Sample 1	41	3.7	9%
Mouse BLC	Sample 2	580.3	25.3	4%
	Sample 1	39.6	3.4	9%
Mouse LIX	Sample 2	616.6	39	6%
Mouse MDC	Sample 1	42.8	2.9	7%
	Sample 2	600.6	31.9	5%

Biological Samples

Serum

Normal mouse serum samples from 4 different strains were tested for endogenous levels of proinflammatory chemokines. The concentrations (pg/mL) measured are shown below:

Analyte	CD-1	Non-Swiss Albino	BALB/c	C57BL/6
Mouse RANTES	11.4	34.9	17.8	15.2
Mosue MIP-3α	3.3	73.5	16.9	15.0
Mosue Eotaxin	3.3	323.7	72.3	242.2
Mouse TARC	1.9	14.4	3.9	12.8
Mouse KC	451.1	102.1	212.4	244.5
Mouse MCP1	3.9	10.8	11.6	5.4
Mouse MIG	14.1	262.5	26.2	33.4
Mouse IP-10	ND	4.0	5.4	ND
Mouse MIP-1α	2.0	4.9	4.4	23.1
Mouse MIP-1β	ND	ND	ND	ND
Mouse BLC	3.4	12398.3	2768.2	2444.8
Mosue LIX	349.5	719.4	221.1	684.7
Mouse MDC	2.4	433.3	30.0	158.1

ND = Non-detectable

Cell Culture Supernatant

Mouse splenocyte (1 x 10⁶ cells/mL) were cultured under various conditions (LPS, 100 ng/mL; CD3, 1 μ g/mL plate-coated; CD28, 1 μ g/mL soluble). Supernatants were collected after 48 hours and assayed with the LEGENDplexTM Mouse Proinflammatory Chemokine Panel kit. The results (all in pg/mL) are summarized below.

Analyte	Control	LPS	CD3 + CD28	PMA + Ionomycin
Mouse RANTES	33.7	615.6	717.3	509.7
Mosue MIP-3α	9.4	9.8	19.6	14.6
Mosue Eotaxin	12.1	11.9	12.4	13.8
Mouse TARC	8.4	9.0	32.8	12.5

10.7	692.0	16.1	17.2
9.5	10.6	10.3	22.9
7.4	7.3	8.4	10.7
5.0	6.2	40.0	18.6
21.7	1208.6	8664.0	6982.0
19.8	55.3	2866.0	763.9
61.6	65.0	78.5	100.1
15.0	14.5	15.8	16.9
17.0	49.6	1583.0	2330.0
	9.5 7.4 5.0 21.7 19.8 61.6 15.0	9.5 10.6 7.4 7.3 5.0 6.2 21.7 1208.6 19.8 55.3 61.6 65.0 15.0 14.5	9.5 10.6 10.3 7.4 7.3 8.4 5.0 6.2 40.0 21.7 1208.6 8664.0 19.8 55.3 2866.0 61.6 65.0 78.5 15.0 14.5 15.8

Mouse fibroblast cells were cultured to approximately 40% confluency and stimulated under various conditions (TNF- α , 1 ng/mL; IL-4, 50 ng/mL; IL-13, 50 ng/mL). Cell Culture supernatants were collected after 48 hours and assayed with the LEGENDplexTM Mouse Proinflammatory Chemokine Panel kit. The results (all in pg/mL) are summarized below.

Analyte	Control	TNF-α + IL-4	TNF-α + IL-13	TNF-α + IL-4 + IL-13
Mouse RANTES	112.5	593.9	547.7	626.8
Mosue MIP-3α	10.4	10.5	9.7	10.0
Mosue Eotaxin	37.5	116.6	124.2	228.9
Mouse TARC	10.2	9.8	9.6	9.9
Mouse KC	3,998.0	6,156.0	5,380.0	6,556.0
Mouse MCP1	3,400.0	5,050.0	4,700.0	5,190.0
Mouse MIG	7.1	7.0	7.0	6.9
Mouse IP-10	20.2	38.9	34.6	42.6
Mouse MIP-1α	8.8	11.9	10.7	11.8
Mouse MIP-1β	16.9	18.9	18.4	19.8
Mouse BLC	67.4	55.3	57.8	57.8
Mosue LIX	2,692.0	5,332.0	4,658.0	6,268.0
Mouse MDC	15.3	14.9	14.6	15.5

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bead popula- tion shifting upward or downward dur- ing acquisition	The strong PE signal from high concentra- tion samples or stan- dards may spill over to classification Channel (e.g., FL3/FL4/APC) and mess up the bead separation.	Optimize instrument settings using Kit Setup Beads, and make appropriate com- pensation between channels.
	Vacuum pressure is insufficient or vacuum manifold does not seal properly.	Increase vacuum pressure such that 0.2 mL buffer can be suctioned in 3-5 seconds. Clean the vacuum manifold and make sure no debris on the manifold. Press down the plate on the manifold to make a good seal.
		Centrifuge samples just prior to assay setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution if too viscous.
Filter plate will		If some wells are still clogged during wash- ing, try the following:
not vacuum or some wells clogged	Samples have insoluble particles or sample is too viscous (e.g., serum	 Add buffer to all the wells, pipette up and down the clogged wells and vacuum again.
	and plasma samples)	2). Use a piece of clean wipe, wipe the un- der side of the clogged wells and vacuum again.
		3). Take a thin needle (e.g., insulin needle), while holding the plate upward, poke the little hole under each of the clogged wells and vacuum again. Do not poke too hard or too deep as it may damage the filter and cause leaking.
	Filter plate was used without pre-wet.	Pre-wet plate with wash buffer before run- ning the assay.

	Beads inappropriately prepared	Sonicate bead vials and vortex just prior to addition. Agitate mixed beads intermit- tently in reservoir while pipetting this into the plate.
Insufficient bead count or	Samples cause beads aggregation due to particulate matter or viscosity.	Centrifuge samples just prior to assay setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution if too viscous.
slow reading	Beads were lost during washing for in-tube assay	Make sure beads are spun down by visu- ally check the pellet (beads are in light blue or blue color). Be very careful when removing supernatant during washing.
	Probe might be par- tially clogged.	Sample probe may need to be cleaned, or if needed, probe should be removed and sonicated.
	Vacuum pressure set too high	Adjust vacuum pressure such that 0.2 mL buffer can be suctioned in 3-5 seconds. Do not exceed 10" Hg of vacuum.
Plate leaked	Plate set directly on table or absorbent tow- els during incubations or reagent additions	Set plate on plate holder or raised edge so bottom of filter is not touching any surface.
	Liquid present on the under side of the plate after vacuum	After washing, press down plate firmly on a stack of clean paper towels to dry the underside of the plate.
	Pipette touching and damaged plate filter during additions.	Pipette to the side of wells.
High Back-	Background wells were contaminated	Avoid cross-well contamination by chang- ing tips between pipetting when perform- ing the assay using a multichannel pipette.
ground	Insufficient washes	The background may be due to non- specific binding of SA-PE. Increase number of washes.
Debris (FSC/ SSC) during sample acquisi- tion	Debris or platelet may exist in sample solu- tion.	Centrifuge samples before analyzing samples. Remove platelet as much as possible.

	-	
	Beads aggregation	Sonicate and vortex the Beads prior to use.
Variation be-	Multichannel pipette may not be calibrated or inconsistent pipet- ting	Calibrate Pipette. Ensure good pipetting practice. Prime pipette before use may help.
tween duplicate samples	Plate washing was not uniform	Make sure all reagents are vacuumed out completely in all wash steps.
	Samples may contain particulate matters.	Centrifuge samples just prior to assay setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution if too viscous.
Low or poor standard curve	The standard was in- correctly reconstituted, stored or diluted	Follow the protocol to reconstitute, store and dilute standard. Double check your calculation.
signal	Wrong or short incuba- tion time	Ensure the time of all incubations was appropriate.
Signals too high, standard curves satu-	PMT value for FL2/PE set too high	Make sure the PMT setting for the re- porter channel is appropriate
rated	Plate incubation time was too long	Use shorter incubation time.
	Samples contain no or below detectable levels of analyte	Make sure the experiment to generate the samples worked. Use proper positive controls.
Sample read- ings are out of range	Samples concentrations higher than highest standard point.	Dilute samples and analyze again.
	Standard curve was saturated at higher end of curve.	Make sure the PMT setting for the re- porter channel is appropriate. Use shorter incubation time if incubation time was too long
Missed beads populations during reading, or distribution	Sample may cause some beads to ag- gregate.	Centrifuge samples just prior to assay setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution if too viscous.
is unequal	Beads populations are not mixed properly	Make sure all bead populations are mixed. and in similar numbers.

PLATE MAP (for in-plate assay)

	1	2	ß	4	Ŋ	9	7	8	6	10	11	12
	8	C4	Sample1	Sample5	Sample 9	Sample 13	Sample 17	Sample 21	Sample 25	Sample 29	Sample 33	Sample 37
1	8	C4	Sample1	Sample5	Sample 9	Sample 13	Sample 17	Sample 21	Sample 25	Sample 29	Sample 33	Sample 37
	C1	CS	Sample2	Sample6	Sample 10	Sample 14	Sample 18	Sample 22	Sample 26	Sample 30	Sample 34	Sample 38
	CI	C5	Sample2	Sample6	Sample 10	Sample 14	Sample 18	Sample 22	Sample 26	Sample 30	Sample 34	Sample 38
	C 3	CG	Sample3	Sample7	Sample 11	Sample 15	Sample 19	Sample 23	Sample 27	Sample 31	Sample 35	Sample 39
	C 2	CG	Sample3	Sample7	Sample 11	Sample 15	Sample 19	Sample 23	Sample 27	Sample 31	Sample 35	Sample 39
	ព	C7	Sample4	Sample8	Sample 12	Sample 16	Sample 20	Sample 24	Sample 28	Sample 32	Sample 36	Sample 40
1	ទ	C	Sample4	Sample8	Sample 12	Sample 16	Sample 20	Sample 24	Sample 28	Sample 32	Sample 36	Sample 40



LEGENDplex[™] Kits are manufactured by **BioLegend** 8999 BioLegend Way San Diego, CA 92121 Tel: 1.858.768.5800 Tel: US & Canada Toll-Free: 1.877.Bio-Legend (1.877.246.5343) Fax: 1.877.455.9587 Email: info@biolegend.com biolegend.com

For a complete list of world-wide BioLegend offices and distributors, please visit our website at: biolegend.com

77807_R7