# BioLegend®

# LEGENDplex™

Human Kidney Function Panel 2
Mix and Match Subpanel
(For Serum/Plasma Samples)

Please read the entire manual before running the assay.

BioLegend.com



Table of Contents Page
Chapter 1: KIT DESCRIPTION
Introduction3
Principle of the Assay 3
Beads Usage 4
Storage Information 6
Materials Supplied 6
Materials to be Provided by the End-User 8
Precautions9
Chapter 2: ASSAY PREPARATION 10
Sample Collection and Handling 10
Reagent Preparation10
Standard Preparation
Sample Dilution
Chapter 3: ASSAY PROCEDURE 12
Performing the Assay Using a Filter Plate 12
Performing the Assay Using a V- bottom Plate 15
Chapter 4: FLOW CYTOMETER SETUP18
Chapter 5: DATA ACQUISITION AND ANALYSIS18
Data Acquisition18
Data Analysis 19
Chapter 6: ASSAY CHARACTERIZATION 20
Representive Standard Curve 20
Assay Sensitivity 20
Cross-Reactivity 21
Linearity of Dilution21
Spike recovery22

Intra-Assay Precision	
Inter-Assay Precision	23
Biological Samples	24
TROUBLESHOOTING	25
PLATE MAP	29

2

### **Chapter 1: KIT DESCRIPTION**

### Introduction

Kidneys are vital organs that perform a variety of important functions: filtration of the waste products from blood and maintenance of the body's water, electrolyte and acid-base status. Therefore, kidney damage can be life threatening. Kidney injuries can be divided into two classes, namely acute and chronic injuries, which are both associated with other diseases such as diabetes and congestive heart failure. Drugs can also induce kidney injuries.

The detection and monitoring of kidney injury at an early stage is important, not only for disease management, but also for drug safety in clinical trials. In the past, measurement of kidney function was based on serum creatinine, blood urea nitrogen (BUN), and electrolyte enzymes. These parameters are poor and often give false positive or negative results. Novel biomarkers have-promised to detect kidney damage earlier than those traditional markers. The LEGENDplex™ Human Kidney Function Panel can be used to profile kidney functional changes using multiple biomarkers. This panel can be a valuable research tool to a wide variety of scientific disciplines, from toxicity screening of drug candidates to basic and translational biomedical research.

The LEGENDplex™ Human Kidney Function Panel 2 is a multiplex bead-based assay, using fluorescence—encoded beads suitable for use on various flow cytometers. This panel allows simultaneous quantification of 7 human proteins, including IGFBP7, NGAL, Cystatin C, TIMP-2, OPN (Osteopontin), TFF3 (Trefoil factor 3), and Uromodulin. This assay panel provides high detection sensitivities and broad dynamic ranges. The panel has been validated for serum and plasma samples. For urine samples, due to the different dilution factors of the analytes, please use other panels that are specifically designed and validated for that sample type.

The Human Kidney Function Panel 2 is designed to allow flexible customization within the panel. Please visit **www.biolegend.com/legendplex** for more information on how to mix and match within the panel.

### **Principle of the Assay**

BioLegend's LEGENDplex  $^{\text{TM}}$  assays are bead-based immunoassays using the same basic principle as sandwich immunoassays.

Beads are differentiated by size and internal fluorescence intensities. Each bead set is conjugated with a specific antibody on its surface and serves as the capture beads for that particular analyte. When a selected panel of capture beads is mixed and incubated with a sample containing target analytes specific to the capture antibodies, each analyte will bind to its specific capture beads. After washing, a biotinylated detection antibody cocktail is added, and each detection antibody in the cocktail will bind to its specific analyte bound on the cap-

ture beads, thus forming capture bead-analyte-detection antibody sandwiches. Streptavidin-phycoerythrin (SA-PE) is subsequently added, which will bind to the biotinylated detection antibodies, providing fluorescent signal intensities in proportion to the amount of bound analytes.


Since the beads are differentiated by size and internal fluorescence intensity on a flow cytometer, analyte-specific populations can be segregated and PE fluorescent signal quantified. The concentration of a particular analyte is determined using a standard curve generated in the same assay.

### **Beads Usage**

The LEGENDplex bead-based assay system uses two sets of beads. Each set has a unique size that can be identified based on their forward scatter (FSC) and side scatter (SSC) profiles (Beads A and Beads B, Figure 1). Each bead set can be further resolved based on their internal fluorescence intensities. The internal dye can be detected using FL3, FL4, or APC channel, depending on the type of flow cytometer used. The smaller Beads (A) consist of 6 (shown in Figure 2) bead populations and 4 of them (A4, A5, A6, and A8) are used for the Human Kidney Function Panel 2. The larger Beads (B) consist of 7 (shown in Figure 3) bead populations and 3 of them (B4, B7 and B9) are used for this panel.

Using a total of 7 bead populations distinguished by size and internal fluorescent dye, the Human Kidney Function Panel 2 allows simultaneous detection of 7 proteins in a single sample. Each analyte is associated with a particular bead set as indicated (Figures 2-3 and Table 1).

Figure 1. Beads Differentiated by Size

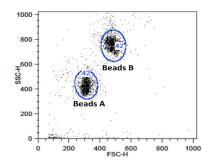

Beads A = smaller beads

Beads B = larger beads

4

Figure 2. Beads A Classification by FL4


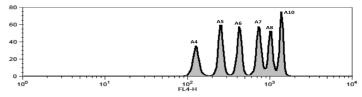


Figure 3. Beads B Classification by FL4

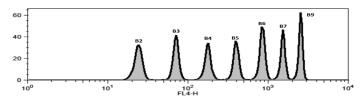

For Beads usage in the panel, please refer to Table 1 below:

Table 1. Panel Targets and Bead ID\*

Target	Bead ID	Mix & Match	Top Standard Concentrations
IGFBP7	A4		The top standard
NGAL	A5		concentration of
Cystatin C	A6		each target may vary and may subject to
TIMP-2	A8		change from lot to
OPN	B4		lot. Please refer to the lot-specific Cer-
TFF3	В7		tificate of Analysis for
Uromodulin	В9		this information.

<sup>\*</sup>Bead ID is used to associate a bead population to a particular analyte when using the LEGENDplex™ data analysis software program. For further information regarding the use of the program please visit biolegend.com/en-us/legendplex

### **Storage Information**

Recommended storage for all original kit components is between 2°C and 8°C. DO NOT FREEZE Pre-mixed Beads, Detection Antibodies or SA-PE.

- Once the standards have been reconstituted, immediately transfer contents into polypropylene vials. DO NOT STORE RECONSTITUTED STAN-DARDS IN GLASS VIALS.
- Upon reconstitution, leftover standard should be stored at ≤-70°C for use within one month. Avoid multiple (>2) freeze-thaw cycles. Discard any leftover diluted standards.

### **Materials Supplied**

The LEGENDplex<sup>TM</sup> kit contains reagents for 100 tests, listed in the table below. When assayed in duplicate, this is enough for an 8-point standard curve and 40 samples.

For the Mix and Match Subpanels, individual beads are provided at 13X concentration. The Buffer Set contains Setup Beads, all Buffers, Plate Sealers, Matrix, and SA-PE.

Kit Components	Quantity	Volume	Cat #
Capture Beads* (see tables below for more information)	varies	varies	varies
LEGENDplex™ Human Kidney Function Panel 2 Detection Antibodies	1 bottle	3.3 mL	740583
LEGENDplex™ Human Kidney Function Panel 2 Standard	1 vial	lyophilized	740584
LEGENDplex™ Buffer Set G	1		740539
Filter Plate* or V-bottom Plate**	1 Plate		740377*or 740379**

<sup>\*</sup> For assay with filter plate. \*\* For assay with V-bottom plate.

# Human Kidney Function Panel 2 Mix and Match Subpanel Capture beads for Mix and Match Subpanels\*

Bead Name	Quantity	Volume	Cat#
LEGENDplex™ Human IGFBP7 Capture Bead A4, 13X	1 vial	270 μL	740472
LEGENDplex™ Human NGAL Capture Bead A5, 13X	1 vial	270 μL	740575
LEGENDplex™ Human Cystatin C Capture Bead A6, 13X	1 vial	270 μL	740568
LEGENDplex™ Human TIMP-2 Capture Bead A8, 13X	1 vial	270 μL	740576
LEGENDplex™ Human Osteopontin Capture Bead B4, 13X	1 vial	270 μL	740572
LEGENDplex™ Human TFF3 Capture Bead B7, 13X	1 vial	270 μL	740573
LEGENDplex™ Human Uromodulin Capture Bead B9, 13X	1 vial	270 μL	740574

Please refer to Beads ID and Panel-Specific Target Selection table (Table 1), to see which capture beads are included in each panel.

### **LEGENDplex™ Buffer Set G (Cat#: 740539)**

Setup Beads: PE Beads	1 vial	1 mL	77842
Setup Beads: Raw Beads	1 vial	1.8 mL	77844
LEGENDplex™ SA-PE	1 bottle	3.3 mL	77743
LEGENDplex™ Assay Buffer	1 bottle	25 mL	77562
LEGENDplex™ Wash Buffer, 20X	1 bottle	25 mL	77564
Lyophilized Standard Resconstituion Buffer	1 vial	1 mL	75241
Plate Sealers	4 sheets		78101

No plate is included in Buffer Set G. Plate need to be ordered separately. Please order the correct type of plate based on the preferred assay protocol (Cat# 740377 or 740378 for Filter Plate and Cat# 740379 for V-bottom Plate)

### Materials to be Provided by the End-User

 A flow cytometer equipped with two lasers (e.g., a 488 nm blue laser or 532 nm green laser and a 633-635 nm red laser) capable of distinguishing 575 nm and 660 nm or a flow cytometer equipped with one laser (e.g., 488 nm blue laser) capable of distinguishing 575 nm and 670 nm.

### Partial list of compatible flow cytometers:

Flow Cytometer	Reporter Channel	Channel Emission	Classification Channel	Channel Emission	Compensa- tion needed?
BD Accuri™ C6™	FL2	585 nm	FL4	675 nm	No*
BD FACSCanto, BD FACSCanto™II	PE	575 nm	APC	660 nm	No*
BD™ LSR, LSR II BD LSRFortessa™	PE	575 nm	APC	660 nm	No*
Gallios™	PE	575 nm	APC	660 nm	No*
CytoFLEX	PE	585 nm	APC	660 nm	No*
NovoCyte	PE	572 nm	APC	660 nm	No*
Attune™ NxT	PE	574 nm	APC	670 nm	No*

<sup>\*</sup>Compensation is not required for the specified flow cytometers when set up properly.

For setting up various flow cytometers, please visit: **www.biolegend.com/legendplex** and click on the **Instrument Setup** tab.

- Multichannel pipettes capable of dispensing 5 μL to 200 μL
- Reagent reservoirs for multichannel pipette
- Polypropylene microfuge tubes (1.5 mL)
- Laboratory vortex mixer
- Sonicator bath (e.g., Branson Ultrasonic Cleaner model #B200, or equivalent)
- Aluminum foil
- Absorbent pads or paper towels
- Plate shaker (e.g., Lab-Line Instruments model #4625, or equivalent)
- Tabletop centrifuges (e.g., Eppendorf centrifuge 5415C, or equivalent)

## Human Kidney Function Panel 2 Mix and Match Subpanel If the assay is performed in a filter plate:

- A vacuum filtration unit (Millipore MultiScreen ® HTS Vacuum Manifold, cat # MSVMHTS00 or equivalent). Instructions on how to use the vacuum manifold can be found at the supplier's website.
- A vacuum source (mini vacuum pump or line vacuum, e.g., Millipore Vacuum Pump, catalog # WP6111560, or equivalent)
- If needed, additional Filter plate can be ordered from BioLegend (Cat# 740377 or 740378).

### If the assay is performed in a V-bottom plate:

- Centrifuge with a swinging bucket adaptor for microtiter plates (e.g., Beckman Coulter Allegra<sup>TM</sup> 6R Centrifuge with MICROPLUS CARRIER adaptor for GH3.8 and JS4.3 Rotors)
- If needed, additional V-bottom plate can be ordered from BioLegend (Cat# 740379).

### **Precautions**

- All blood components and biological materials should be handled as potentially hazardous. Follow universal precautions as established by the Center for Disease Control and Prevention and by the Occupational Safety and Health Administration when handling and disposing of infectious agents.
- Sodium azide has been added to some reagents as a preservative. Although the concentrations are low, sodium azide may react with lead and copper plumbing to form highly explosive metal azides. On disposal, flush with a large volume of water to prevent azide build-up.
- Do not mix or substitute reagents from different kits or lots. Reagents from different manufacturers should not be used with this kit.
- Do not use this kit beyond its expiration date.
- SA-PE and beads are light-sensitive. Minimize light exposure.

### Chapter 2: ASSAY PREPARATION

### **Sample Collection and Handling**

### **Preparation of Serum Samples:**

- Allow the blood to clot for at least 30 minutes and centrifuge for 10 minutes at 1,000 x g.
- Remove serum and assay immediately or aliquot and store samples at ≤-20°C. Avoid multiple (>2) freeze/thaw cycles.
- When using frozen samples, it is recommended that samples are thawed completely, mixed and centrifuged to remove particulates prior to use.

### **Preparation of Plasma Samples:**

- Plasma collection using either EDTA, Heparin, or Citrate as an anti-coagulant are acceptable sample types to be tested with this kit. Centrifuge for 10 minutes at 1,000 x g within 30 minutes of blood collection.
- Remove plasma and assay immediately, or aliquot and store samples at ≤-20°C. Avoid multiple (>2) freeze/thaw cycles.
- When using frozen samples, it is recommended that samples are thawed completely, mixed well and centrifuged to remove particulates.

NOTE: Because there are very high levels of NGAL and TIMP-2 in saliva, care must be taken to avoid contamination of reagents and samples from end-user's saliva. Consider utilizing a face mask or shield.

### **Reagent Preparation**

### **Preparation of Antibody-Immobilized Beads**

Sonicate Pre-mixed Beads bottle for 1 minute in a sonicator bath and then vortex for 30 seconds prior to use. If no sonicator bath is available, increase the vortexing time to 1 minute to completely resuspend the beads.

### **Preparation of Wash Buffer**

- Bring the 20X Wash Buffer to room temperature and mix to bring all salts into solution.
- Dilute 25 mL of 20X Wash Buffer with 475 mL deionized water. Store unused portions between 2°C and 8°C for up to one month.

### **Standard Preparation**

1. Prior to use, reconstitute the lyophilized Human Kidney Function Panel 1 Standard Cocktail with 250 μL Lyophilized Standard Reconstitution Buffer.

Important: the standard must be reconstituted in the Lyophilized Standard Reconstitution Buffer in order to obtain optimal standard curves.

2. Mix and allow the vial to sit at room temperature for 10 minutes, and then transfer the standard to an appropriately labeled polypropylene microfuge tube. This will be used as the top standard C7.

Note: The top standard concentrations of analytes in this panel were set at various concentrations, but may be subject to change from lot to lot (please visit biolegend.com/en-us/legendplex to download a lot-specific certificate of analysis ).

- 3. Label 6 polypropylene microfuge tubes as C6, C5, C4, C3, C2 and C1, respectively.
- 4. Add 75  $\mu$ L of Assay Buffer to each of the six tubes. Prepare 1:4 dilution of the top standard by transferring 25  $\mu$ L of the top standard C7 to the C6 tube and mix well. This will be the C6 standard.
- 5. In the same manner, perform serial 1:4 dilutions to obtain C5, C4, C3, C2 and C1 standards (see the table below using the top standard at 800 ng/mL as an example). Assay Buffer will be used as the 0 ng/mL standard (C0)

Tube/Standard ID	Serial Dilution	Assay Buffer to add (μL)	Standard to add	Final Conc. (ng/mL)
C7				800
C6	1:4	75	25 μL of C7	200
C5	1:16	75	25 μL of C6	50
C4	1:64	75	25 μL of C5	12.5
C3	1:256	75	25 μL of C4	3.13
C2	1:1024	75	25 μL of C3	0.78
C1	1:4096	75	25 μL of C2	0.20
C0		75		0

### **Sample Dilution**

 Serum or plasma samples should be diluted at 50-fold with Assay Buffer as described in the table below. If further sample dilution is needed, the dilution should be done with Assay Buffer.

Sample	Dilution (1:50)
Serum or Plasma	4 μL of samples + 196 μL of Assay Buffer

### **Chapter 3: ASSAY PROCEDURE**

The LEGENDplex<sup>™</sup> assay can be performed in a filter plate, or in a V-bottom plate.

- The in-filter plate assay procedure requires a vacuum filtration unit for washing (see Materials to be Provided by the End-User, page 8). If you have performed bead-based multiplex assays before, your lab may already have the vacuum filtration unit set up.
- If the in-filter plate assay procedure is not possible or if you prefer, the assay can be performed in a V-bottom plate.


### Performing the Assay Using a Filter Plate

- Allow all reagents to warm to room temperature (20-25°C) before use.
- Set the filter plate on an inverted plate cover at all times during assay setup and incubation steps, so that the bottom of the plate does not touch any surface. Touching a surface may cause leakage.
- Keep the plate upright during the entire assay procedure, including the washing steps, to avoid losing beads.
- The plate should be placed in the dark or wrapped with aluminum foil for all incubation steps.
- Standards and samples should be run in duplicate and arranged on the
  plate in a vertical configuration convenient for data acquisition and
  analysis (as shown in attached PLATE MAP, page 29). Be sure to load
  standards in the first two columns. If an automation device is used
  for reading, the orientation and reading sequence should be carefully
  planned.

- 1. Pre-wet the plate by adding 100 µL of LEGENDplex<sup>TM</sup> 1X Wash Buffer to each well and let it sit for 1 minute at room temperature. To remove the excess volume, place the plate on the vacuum manifold and apply vacuum. Do not exceed 10" Hg of vacuum. Vacuum until wells are drained (5-10 seconds). Blot excess Wash Buffer from the bottom of the plate with an absorbent pad or paper towels. Place the plate on top of the inverted plate cover.
- 2. Load all the wells including standards and samples wells with 25  $\mu\text{L}$  of Assay Buffer.
- 3. Load 25  $\mu$ L of either prepared standards to corresponding standard wells or diluted samples to sample wells.
- 4. Vortex mixed beads bottle for 30 seconds. Add 25  $\mu$ L of mixed beads to each well. The volume should be 75  $\mu$ L in each well after beads addition. (Note: During addition of the beads, shake mixed beads bottle intermittently to avoid bead settling).
- 5. Seal the plate with a plate sealer. To avoid plate leaking, do not apply positive pressure to the sealer when sealing the plate. Wrap the entire plate, including the inverted plate cover, with aluminum foil. Place the plate on a plate shaker, secure it and shake at approximate 500 rpm for 2 hours at room temperature.
- 6. Do not invert the plate! Place the plate on the vacuum manifold and apply vacuum as before in Step 1. Add 200  $\mu$ L of 1X Wash Buffer to each well. Remove Wash Buffer by vacuum filtration. Blot excess Wash Buffer from the bottom of the plate with an absorbent pad or paper towels. Repeat this washing step once more.
- 7. Add 25  $\mu$ L of Detection Antibodies to each well.
- 8. Seal the plate with a fresh plate sealer. Wrap the entire plate, including the inverted plate cover, with aluminum foil. Place the plate on a plate shaker and shake at approximately 500 rpm for 1 hour at room temperature.
- 9. Do not vacuum! Add 25 μL of SA-PE to each well directly.
- 10. Seal the plate with a fresh plate sealer. Wrap the entire plate, including the inverted plate cover, with aluminum foil. Place the plate on a plate shaker and shake at approximate 500 rpm for 30 minutes at room temperature.
- 11. Repeat step 6 above.
- 12. Add 150  $\mu$ L of 1X Wash Buffer to each well. Resuspend the beads on a plate shaker for 1 minute.
- 13. Read samples on a flow cytometer, preferably within the same day of the assay (Note: Prolonged sample storage can lead to reduced signal).

If the flow cytometer is equipped with an autosampler, read the plate directly using the autosampler. Please be sure to program the autosampler to resuspend beads in the well immediately before taking samples. The probe height may need to be adjusted when using an autosampler.

If an autosampler is not available, the samples can be transferred from the filter plate to micro FACS (or FACS) tubes and read manually.

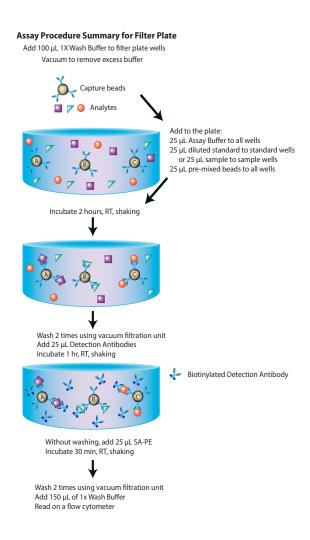

### Performing the Assay Using a V-bottom Plate

- Allow all reagents to warm to room temperature (20-25°C) before use.
- Keep the plate upright during the entire assay procedure, including the washing steps, to avoid losing beads.
- The plate should be placed in the dark or wrapped with aluminum foil for all incubation steps.
- Standards and samples should be run in duplicate and arranged on the
  plate in a vertical configuration convenient for data acquisition and analysis
  (as shown in attached PLATE MAP, page 29). Be sure to load standards in
  the first two columns of plate. If an automation device is used for reading,
  the orientation and reading sequence should be carefully planned.
- 1. Load all the wells including standards and samples wells with 25  $\mu L$  of Assay Buffer.
- 2. Load 25  $\mu$ L of either prepared standards to corresponding standard wells or diluted samples to sample wells.
- 3. Vortex mixed beads for 30 seconds. Add 25  $\mu$ L of mixed beads to each well. The total volume should be 75  $\mu$ L in each well after beads addition. (Note: During beads addition, shake mixed beads bottle intermittently to avoid bead settling).
- 4. Seal the plate with a plate sealer. Cover the entire plate with aluminum foil to protect the plate from light. Shake at 800 rpm on a plate shaker for 2 hours at room temperature (Depending on the shaker, the speed may need to be adjusted. The optimal speed is one that is high enough to keep beads in suspension during incubation, but not too high so it causes spill from the wells).
- 5. Centrifuge the plate at 1050 rpm (~250 g) for 5 minutes, using a swinging bucket rotor (Ex: G.H 3.8) with microplate adaptor (Please refer to Materials to be Provided by the End-User, page 8). Do not use excessive centrifugation speed as it may make it harder to resuspend beads in later steps. Make sure the timer of the centrifuge works properly and standby to make sure the centrifuge reaches preset speed.
- 6. Immediately after centrifugation, dump the supernatant into a sink by quickly inverting and flicking the plate in one continuous and forceful motion. Do not worry about losing beads even if the pellet is not visible. The beads will stay in the tip of the well nicely. Blot the plate on a stack of clean paper towel and drain the remaining liquid from the well as much as possible. Be careful not to disturb the bead pellet.

Alternatively, removal of the supernatant may be completed using a multichannel pipette set at 75  $\mu$ L. Try to remove as much liquid as possible


# Human Kidney Function Panel 2 Mix and Match Subpanel without removing any beads. Be sure to change pipette tips between each row or column.

- 7. Wash the plate by dispensing 200  $\mu$ L of washing buffer into each well and incubate for one minute. Repeat step 5 and 6 above. A second wash is optional, but may help reduce background.
- 8. Add 25 µL Detection Antibodies to each well.
- 9. Seal the plate with a new plate sealer. Cover the entire plate with aluminum foil to protect the plate from light. Shake at 800 rpm on a plate shaker for 1 hour at room temperature.
- **10. Do not wash the plate!** Add 25 μL of SA-PE to each well directly.
- 11. Seal the plate with a new plate sealer. Wrap the entire plate with aluminum foil and shake the plate on a plate shaker at approximate 800 rpm for 30 minutes at room temperature.
- 12. Repeat step 5 and 6 above.
- 13. Wash the plate by dispensing 200  $\mu$ L of washing buffer into each well and incubate for one minute. Repeat step 5 and 6 above. This final wash is optional, it may help reduce background.
- 14. Add 150  $\mu L$  of 1X Wash Buffer to each well. Resuspend the beads by pipetting.
- 15. Read samples on a flow cytometer, preferably within the same day of the assay (Note: Prolonged sample storage can lead to reduced signal).

If the flow cytometer is equipped with an autosampler, the samples can be read directly. Please be sure to program the autosampler to resuspend beads in the well immediately before taking samples. The probe height may need to be adjusted when using an autosampler.

If an autosampler is not available, the samples can be transferred from the plate to micro FACS (or FACS) tubes and read manually.

### **Assay Procedure Summary for V-bottom Plate**

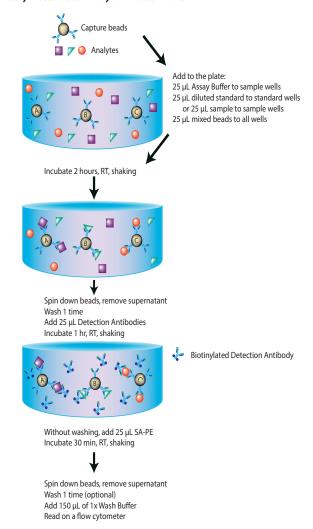

### Chapter 4: FLOW CYTOMETER SETUP

In order to generate accurate data, the flow cytometer must be set up properly before data acquisition.

The setup instructions have been removed from this manual and uploaded onto our website to save paper.

To access the setup instructions, please visit: www.biolegend.com/legendplex and click on the Instrument Setup tab.

### Chapter 5: DATA ACQUISITION AND ANALYSIS

### **Data Acquisition**

- 1. Before reading samples, make sure that the flow cytometer is set up properly.
- Create a new template or open an existing template (for details on how to create a cytometer-specific template, please refer to the Flow Cytometer Setup Guide).
- 3. Vortex each sample for 5 seconds before analysis.
- 4. Set the flow rate to low. Set the number of beads to be acquired to about 300 per analyte (e.g., acquire 2,100 beads for a 7-plex assay). Do not set to acquire total events as samples may contain large amounts of debris. Instead, create a large gate to include both Beads A and Beads B (gate A+B) and set to acquire the number of events in gate A + B. This will exclude majority of debris.

Note: Do not acquire too few or too many beads. Too few beads acquired may result in high CVs and too many beads acquired may result in slow data analysis later.

5. Read samples.

When reading samples, set the flow cytometer to setup mode first and wait until bead population is stabilized before recording or switching to acquisition mode.

To simplify data analysis using the LEGENDplex<sup>™</sup> Data Analysis Software, read samples in the same order as shown on the PLATE MAP attached at the end of the manual. For an in-plate assay, read column by column (A1, B1, C1...A2, B2, C2...).

18

When naming data files, try to use simple names with a consecutive numbering for easy data analysis (e.g. for standards, C0.001, C0.002, C1.003, C1.004, C2.005, C2.006, C3.007, C3.008, ... C7.015, C7.016; for samples, S1.017, S1.018, S2.019, S2.020, S3.021, S3.022...)

Store all FCS files in the same folder for each assay. If running multiple assays, create a separate folder for each assay.

6. Proceed to data analysis using LEGENDplex<sup>™</sup> Data Analysis Software when data acquisition is completed.


### **Data Analysis**

• The assay FCS files should be analyzed using BioLegend's LEGENDplex™ data analysis software. The program is offered free of charge with the purchase of any LEGENDplex™ assay. For further information regarding access to, and use of the program please visit biolegend.com/en-us/legendplex.

### **Chapter 6: ASSAY CHARACTERIZATION**

### **Representative Standard Curve**

This standard curve was generated using the LEGENDplex<sup>™</sup> Human Kidney Function Panel 2 for demonstration purposes only. A standard curve must be run with each assay.

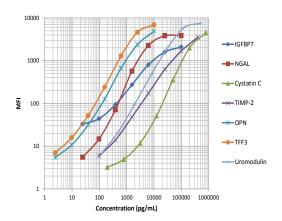

### **Assay Sensitivity**

The assay sensitivity is the theoretical limit of detection calculated using the LEGENDplex $^{\text{TM}}$  Data Analysis Software by applying a 5-paramater curve fitting algorithm. Assay Sensitivity presented here is  $\leq$ Mean LOD + 2xSTDEV LOD.

Analyte	LOD in Assay Buffer (pg/mL)
Human IGFBP7	34.00
Human NGAL	18.63
Human Cystatin C	181.72
Human TIMP-2	1.55
Human OPN	3.50
Human TFF3	2.35
Human Uromodulin	61.00

### **Cross-Reactivity**

The following human purified or recombinant proteins were tested individually using the LEGENDplex<sup>™</sup> Human Kidney Function Panel 2. There was negligible cross-reactivity found for all of the proteins tested.

OPN detection reagents are specific to the full length form of this protein.

Albumin	B2M	Clusterin	Cystatin C	EGF	FABP1	FABP3
IGFBP7	IL-4	IL-6	IL-18	IL-21	IL-22	IL-12
IP-10	KIM-1	MCP-1	M-SCF	MMP-1	NGAL	OPN
Renin	RBP4	STNF RI	TFF3	TIMP-1	TIMP-2	TRANCE
Uro- modulin	VEGF 121					

### **Linearity of Dilution**

For testing linearity of dilution, serum (n=6) and plasma (n=4) samples were first diluted 50-fold with Assay Buffer, then serially diluted 1:2, 1:4, 1:8 with Assay Buffer and assayed. The measured concentrations of serially diluted samples were then compared with the concentration of 50-fold diluted urine samples based on serial dilution factor used.

Analyte	Serum	Plasma
Human IGFBP7	99%	90%
Human NGAL	114%	117%
Human Cystatin C	102%	100%
Human TIMP-2	121%	121%
Human OPN	119%	117%
Human TFF3	104%	100%
Human Uromodulin	119%	121%

### **Spike Recovery**

For spike recovery, serum samples (n=6) were first diluted 50-fold with Assay Buffer, then target proteins were spiked at three different levels into samples. The spiked samples were assayed, and the measured concentrations were compared with expected values.

Analyte	Serum
Human IGFBP7	86%
Human NGAL	112%
Human Cystatin C	97%
Human TIMP-2	68%
Human OPN	87%
Human TFF3	86%
Human Uromodulin	67%

### **Intra-Assay Precision**

Two samples with different concentrations of each target protein were analyzed in one assay with 16 replicates per sample. The resulting intraassay precision is shown below.

Analyte	Sample	Mean (ng/ mL)	STDEV	%CV
Human IGFBP7	Sample 1	0.41	0.04	9%
Human IGFBP7	Sample 2	1.67	0.22	13%
Human NGAL	Sample 1	0.59	0.05	8%
Human NGAL	Sample 2	2.15	0.23	11%
Human Custatin C	Sample 1	3.87	0.25	7%
Human Cystatin C	Sample 2	13.6	1.21	9%
Human TIMD 2	Sample 1	1.64	0.09	6%
Human TIMP-2	Sample 2	6.11	0.34	5%

Lluman ODN	Sample 1	0.05	0.004	8%
Human OPN	Sample 2	0.81	0.02	11%
Human TFF3	Sample 1	0.05	0.004	7%
Human 1FF3	Sample 2	0.19	0.02	11%
Lluman Hramadulin	Sample 1	3.17	0.22	7%
Human Uromodulin	Sample 2	10.5	1.00	10%

### **Inter-Assay Precision**

Two samples with different concentrations of each target protein were analyzed in four independent assays with 4 replicates per sample. The resulting inter-assay precision is shown below.

Analyte	Sample	Mean (ng/mL)	STDEV	%CV
Human IGFBP7	Sample 1	0.36	0.08	17%
Human IGFBP7	Sample 2	1.54	0.33	21%
Lluman NCAI	Sample 1	0.50	0.08	17%
Human NGAL	Sample 2	1.84	0.20	11%
Harman Cartatia C	Sample 1	2.90	0.61	21%
Human Cystatin C	Sample 2	12.1	1.57	13%
Harris TIMP 2	Sample 1	1.28	0.27	21%
Human TIMP-2	Sample 2	4.73	0.40	9%
H CDN	Sample 1	0.04	0.01	15
Human OPN	Sample 2	0.16	0.02	11%
H TEE2	Sample 1	0.04	0.01	12%
Human TFF3	Sample 2	0.16	0.02	13%
	Sample 1	2.56	0.42	17%
Human Uromodulin	Sample 2	9.17	1.03	11%

### Human Kidney Function Panel 2 Mix and Match Subpanel Biological Samples

### **Serum and Plasm**

Normal human serum and plasma samples from different donors were tested for endogenous levels of proteins. The range and mean concentrations (ng/mL) measured are shown below.

Analyte		Serum (n=16)	Plasma (n=8)
Human IGFBP7	Range	27.6-89.1	29.5-93.2
nulliali IGFBP7	Mean	60.6	65.7
Human NGAL	Range	174.9-2,647	100.1-185.7
Human NGAL	Mean	702.9	141.9
Human Cystatin C	Range	329.7-893.9	371.1-516.9
Human Cystatin C	Mean	621.8	458.9
Human TIMP-2	Range	35.4-99.6	42.5-61.7
Tiuman mvir-2	Mean	61.9	49.0
Human OPN	Range	0.4-8.2	1.4-14.3
Human OPN	Mean	3.5	6.3
	Range	3.2-26.9	2.4-26.4
Human TFF3	Mean	7.0	6.0
	Range	62.1-208.3	117.0-179.4
Human Uromodulin	Mean	115.2	137.7

### **TROUBLESHOOTING**

Problem	Possible Cause	Solution			
Bead population shifting upward or downward during acquisition	The strong PE signal from high concentration samples or standards may spill over to classification Channel (e.g., FL3/FL4/APC) and mess up the bead separation.	Optimize instrument settings using Kit Setup Beads, and make appropriate com- pensation between channels.			
centrifugation. Sample may need dilution if too viscous.  If some wells are still clogged during wathing ing, try the following:  1). Add buffer to all the wells, pipette up and down the clogged wells and vacuum					
	setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution				
Filter plate will		If some wells are still clogged during washing, try the following:			
not vacuum	Samples have insoluble particles or sample is too viscous (e.g., serum	1). Add buffer to all the wells, pipette up and down the clogged wells and vacuum again.			
	and plasma samples)	2). Use a piece of clean wipe, wipe the under side of the clogged wells and vacuum again.			
		3). Take a thin needle (e.g., insulin needle), while holding the plate upward, poke the little hole under each of the clogged wells and vacuum again. Do not poke too hard or too deep as it may damage the filter and cause leaking.			
	Filter plate was used without pre-wet.	Pre-wet plate with wash buffer before running the assay.			

	Beads inappropriately prepared	Sonicate bead vials and vortex just prior to addition. Agitate mixed beads intermittently in reservoir while pipetting this into the plate.
Insufficient bead count or	Samples cause beads aggregation due to particulate matter or viscosity.	Centrifuge samples just prior to assay setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution if too viscous.
slow reading	Beads were lost during washing for in-tube assay	Make sure beads are spun down by visually check the pellet (beads are in light blue or blue color). Be very careful when removing supernatant during washing.
	Probe might be partially clogged.	Sample probe may need to be cleaned, or if needed, probe should be removed and sonicated.
	Vacuum pressure set too high	Adjust vacuum pressure such that 0.2 mL buffer can be suctioned in 3-5 seconds. Do not exceed 10" Hg of vacuum.
Plate leaked	Plate set directly on table or absorbent tow- els during incubations or reagent additions	Set plate on plate holder or raised edge so bottom of filter is not touching any surface.
Trace reased	Liquid present on the under side of the plate after vacuum	After washing, press down plate firmly on a stack of clean paper towels to dry the underside of the plate.
	Pipette touching and damaged plate filter during additions.	Pipette to the side of wells.
High Back-	Background wells were contaminated	Avoid cross-well contamination by changing tips between pipetting when performing the assay using a multichannel pipette.
ground	Insufficient washes	The background may be due to non- specific binding of SA-PE. Increase number of washes.
Debris (FSC/ SSC) during sample acquisi- tion	Debris or platelet may exist in sample solution.	Centrifuge samples before analyzing samples. Remove platelet as much as possible.

	i	
	Beads aggregation	Sonicate and vortex the Beads prior to use.
Variation be-	Multichannel pipette may not be calibrated or inconsistent pipet- ting	Calibrate Pipette. Ensure good pipetting practice. Prime pipette before use may help.
tween duplicate samples	Plate washing was not uniform	Make sure all reagents are vacuumed out completely in all wash steps.
	Samples may contain particulate matters.	Centrifuge samples just prior to assay setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution if too viscous.
Low or poor standard curve	The standard was in- correctly reconstituted, stored or diluted	Follow the protocol to reconstitute, store and dilute standard. Double check your calculation.
signal	Wrong or short incubation time	Ensure the time of all incubations was appropriate.
Signals too high, standard curves satu-	PMT value for FL2/PE set too high	Make sure the PMT setting for the reporter channel is appropriate
rated	Plate incubation time was too long	Use shorter incubation time.
	Samples contain no or below detectable levels of analyte	Make sure the experiment to generate the samples worked. Use proper positive controls.
Sample read- ings are out of range	Samples concentrations higher than highest standard point.	Dilute samples and analyze again.
	Standard curve was saturated at higher end of curve.	Make sure the PMT setting for the reporter channel is appropriate. Use shorter incubation time if incubation time was too long
Missed beads populations during reading, or distribution	Sample may cause some beads to aggregate.	Centrifuge samples just prior to assay setup and use supernatant. If high lipid content is present, remove lipid layer after centrifugation. Sample may need dilution if too viscous.
is unequal	Beads populations are not mixed properly	Make sure all bead populations are mixed. and in similar numbers.

28

# PLATE MAP (for in-plate assay)

						•	•		•			
	1	2	3	4	2	9	7	8	6	10	11	12
∢	00	2	Sample1	Sample5	Sample 9	Sample 13	Sample 17	Sample 21	Sample 25	Sample 29	Sample 33	Sample 37
8	00	25	Sample1	Sample5	Sample 9	Sample 13	Sample 17	Sample 21	Sample 25	Sample 29	Sample 33	Sample 37
U	C1	CS	Sample2	Sample6	Sample 10	Sample 14	Sample 18	Sample 22	Sample 26	Sample 30	Sample 34	Sample 38
Q	C1	C5	Sample2	Sample6	Sample 10	Sample 14	Sample 18	Sample 22	Sample 26	Sample 30	Sample 34	Sample 38
ш	72	90	Sample3	Sample7	Sample 11	Sample 15	Sample 19	Sample 23	Sample 27	Sample 31	Sample 35	Sample 39
ш	C2	90	Sample3	Sample7	Sample 11	Sample 15	Sample 19	Sample 23	Sample 27	Sample 31	Sample 35	Sample 39
U	ខ	72	Sample4	Sample8	Sample 12	Sample 16	Sample 20	Sample 24	Sample 28	Sample 32	Sample 36	Sample 40
I	ខ	72	Sample4	Sample8	Sample 12	Sample 16	Sample 20	Sample 24	Sample 28	Sample 32	Sample 36	Sample 40



LEGENDplex™ Kits are manufactured by **BioLegend** 

8999 BioLegend Way San Diego, CA 92121 Tel: 1.858.768.5800

Tel: US & Canada Toll-Free: 1.877.Bio-Legend (1.877.246.5343)

Fax: 1.877.455.9587

Email: info@biolegend.com

biolegend.com

For a complete list of world-wide BioLegend offices and distributors, please visit our website at: biolegend.com